

BSI (Body System Interface) Reboot Procedure

STEP 1 - Roll the driver's window down, lift the hood, and ensure all equipment is switched off.

STEP 2 - Remove the key from the ignition

STEP 3 - Close all doors and wait for 3 minutes

STEP 4 - Disconnect the vehicle battery and wait 15 seconds.

STEP 5 - Reconnect the vehicle battery and wait a further 10 seconds. Don't open the doors while doing so.

STEP 6 - Switch on the side lights through the driver's window.

STEP 7 - Switch on the ignition and check the system's functionality.

STEP 8 - Hold the lock button on the key fob down for 10 seconds.

STEP 9 - remove the key, open & close doors, and test the central locking system

STEP 10 - Start the engine and complete the system's check.

NOTE: Failure to follow this procedure could result in the incorrect operation of many BSI-related items.